# pisloth

sunfounder

Jul 20, 2021

# CONTENTS

1	Abou	ıt SunFo	under	1						
2	Abou	ıt This K	lit	1 3 5 5 7 7 7 9 10 10 10 10 10						
3	Free	Support	i de la constante de la constan	5						
	3.1	Introdu	ction	5						
	3.2	Compo	nents List	7						
		3.2.1	Structural Plate	7						
		3.2.2	Electronic Components	9						
		3.2.3	Tools	10						
		3.2.4	Self-Provided Components	10						
	3.3	How to	control	10						
	3.4	Getting	Started with Software	10						
		3.4.1	Downloading Codes	10						
		3.4.2	Install Arduino IDE	11						
	3.5	Assemb	bly	17						
		3.5.1	Install the base of Rollarm	17						
		3.5.2	Install Accessories	22						
		3.5.3	Calibrate the steering gear angle	23						
		3.5.4	Install Servo Rocker Arm	26						
		3.5.5	Install Button	38						
		3.5.6	Install Battery	41						
	3.6	Control	the Rollarm	42						
		3.6.1	Manual Control	43						
		3.6.2	PC Control	48						
	3.7	FAQ.		56						
		3.7.1	About the Assembly	56						
		3.7.2	About the Arduino code control	57						
		3.7.3	About the Labview software control	59						
4	Сору	right No	otice	61						

#### 4 Copyright Notice

ONE

## **ABOUT SUNFOUNDER**

SunFounder is a technology company focused on Raspberry Pi and Arduino open source community development. Committed to the promotion of open source culture, we strive to bring the fun of electronics making to people all around the world and enable everyone to be a maker. Our products include learning kits, development boards, robots, sensor modules and development tools. In addition to high quality products, SunFounder also offers video tutorials to help you build your own project. If you have interest in open source or making something cool, welcome to join us! Visit www.sunfounder.com for more!

# **ABOUT THIS KIT**

The Rollarm Kit for Arduino is designed for mass hobbyists to learn robot arm control. With the open source MCU Arduino UNO and a servo expansion board, you can control its four axes by the 4 potentiometer on the handle, as well as make them move by operating on your computer. In addition, it can memorize the movements it's made and repeat again and again, making it a great tool for repeated tasks. In this book, you can learn the basics of how a mechanical arm works and how to make one piece by piece. For more information, please go to our website www.sunfounder.com and find the tutorial under Learn.

#### THREE

## **FREE SUPPORT**

If you have any TECHNICAL questions, add a topic under Community -> Forum section on our website and we'll reply as soon as possible.

For NON-TECH questions like order and shipment issues, please send an email to service@sunfounder.com. You're also welcomed to share your projects on Forum.

Content

# 3.1 Introduction

The Rollarm Kit is an interesting and useful learning tool for Arduino and robot hobbyists. With the structural plate and code based on Arduino, it enables users to learn programming from easy to difficult, control the mechanical arm freely and perform various fun operations!

This fun mechanical arm consists of 4 axes, each controlled by a servo. Powered by a 9V battery, the control systems is composed of SunFounder Uno board, servo extension board with remote control. The kit includes all necessary components like structural plate, circuit boards, and connector parts. For your better learning, installation and debugging video tutorials are provided on youtube. Also you can download the user manual which elaborates on the installation procedures and program explanation. With these resources, you can quickly and effortlessly make creative projects with the Rollarm. Now let's go to get the fun!



# 3.2 Components List

#### 3.2.1 Structural Plate







φ3\*φ8\*2.5 Band Edge Bearing (1)

#### **3.2.2 Electronic Components** ..... **One-Side Servo** Servo Screw Arm Α ..... Servo Screw **Double-Side** SunFounder В Servo Arm Servo Servo Screw (4) Cross Servo В Arm 00 SunFounder Potentiometer **Button** Expansion **UNO Board** Board Button (1)(1) (4) (1) 1111111111 Cable Spiral Wrap USB Type-B Cable 3M Non-skid Cable Clip pad (4) (2)(1)(2)



#### 3.2.4 Self-Provided Components



9V Battery (1)

# 3.3 How to control

- 1. Install Arduino IDE
- 2. Assemble the Rollarm (Remember to **configure the servos** before assembly. Pay attention to the detailed operations)
- 3. Control with handle: **download** the Rollarm package and run the program (Indispensable step before operating the Rollarm)
- 4. Control with Labview: **download** the Labview to your PC and install for control (download is a must-do before subsequent operating) Let's get started. Enjoy!

# 3.4 Getting Started with Software

#### 3.4.1 Downloading Codes

Go to Learn->Robot Kit->DIY Control Robot Arm kit for Arduino-Rollarm and download the package

# Get tutorials /Robot Kit/ DIY Control Robot Arm kit for Arduino-Rollarm

#### SunFounder:

If you have any questions, please send an email to support@sunfounder.com .

For more tutorials, back to the Learn section. To share your cool works, welcome post in our Forum section.



#### 3.4.2 Install Arduino IDE

Arduino is an open source platform that applies simple software and hardware. You can get it in a short even when you know little of it. It provides an integrated development environment (IDE) for code editing and compiling, compatible with multiple control boards. So you can just download the Arduino IDE, upload the sketches (i.e. the code files) to the board, and then you can see experimental phenomena. For more information, refer to http://www.arduino.cc.

The code in this kit is written based on Arduino, so you need to install the IDE first. Skip it if you have done this.

**Step 1:** Go to the arduino.cc website and click Download. On the page, check the software list on the right side under Download the Arduino Software.



Find the one that suits your operation system and click to download. There are two versions of Arduino for Windows:

Installer or ZIP file. You're recommended to download the former.

**Step 2:** Double click the exe. file and the following window will show up. Click I Agree. The following interface will show up.

💿 Arduino Setup: License Agreement 📃 📼	x
Please review the license agreement before installing Arduino. If you accept all terms of the agreement, click I Agree.	
SNU LESSER GENERAL PUBLIC LICENSE	•
Version 3, 29 June 2007	
Copyright (C) 2007 Free Software Foundation, Inc. < <u>http://fsf.org/</u> >	
Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.	
This version of the GNU Lesser General Public License incorporates the terms and conditions of version 3 of the GNU General Public License, supplemented by the additional permissions listed below.	•
Cancel Nullsoft Install System v3.0 I Agree	: :

Choose Next.

💿 Arduino Setup: Installation C	Options 🗖 🖻 🗙						
Check the components you want to install and uncheck the components you don't want to install. Click Next to continue.							
Select components to install:	<ul> <li>Install Arduino software</li> <li>Install USB driver</li> <li>Create Start Menu shortcut</li> <li>Create Desktop shortcut</li> <li>Associate .ino files</li> </ul>						
Space required: 412.8MB							
Cancel Nullsoft Instal	System v3.0 < Back Next >						

Click **Browse** to choose the installation path or enter a directory at the Destination Folder. Click **Install**.

💿 Arduino Setup: Installation Folder
Setup will install Arduino in the following folder. To install in a different folder, click Browse and select another folder. Click Install to start the installation.
Destination Folder
C:\Program Files\Arduino\ Browse
Space required: 412.8MB
Space available: 37.7GB
Cancel Nullsoft Install System v3.0 < Back Install

The following interface will show up.

**Note:** After the installing progress bar goes to the end, the Close button may be enabled for some PC. Just click it to complete the installation.

💿 Arduino Setup: Installing	
Extract: GSMVCSConstructor.html	
Show details	
Cancel Nullsoft Install System v3.0 < Back	Close

Then a prompt appears. Select Always trust software for "Adafruit Industries" and click Install.

E Windows Security	X
Would you like to install this device software? Name: Adafruit Industries LLC Ports (COM & LPT Publisher: Adafruit Industries	
Always trust software from "Adafruit Industries".	Do <u>n</u> 't Install
You should only install driver software from publishers you trus decide which device software is safe to install?	t. <u>How can I</u>

Select "Always trust software for Arduino srl" and click Install.



After the installation is done, click **Close**. Then an Arduino icon will appear on the desktop:



# 3.5 Assembly

#### 3.5.1 Install the base of Rollarm







Note: You can turn the wrench clockwise to tighten the selflocking nut.



# Complete 3M Non-skid pad



#### 3.5.2 Install Accessories



#### 3.5.3 Calibrate the steering gear angle

**Warning:** Before installing the rocker arms for each servo, you need to adjust the servo. If you skip this step and finish assembling and power the product, the servo may appear to block or be damaged, you may even need to disassemble the robot from this step to reassemble it!

**Step 1:** Prepare four white servos, and then insert the Servo A wires into D4, Insert the Servo B wires into D5, Insert the Servo C wires into D6, Insert the Servo D wires into D7.



**Step 2:** connect the Servo Control Board to the PC via the USB Type-B Cable, and the PC will automatically install the driver.

**Step 3:** Go to the folder DIY Control Robot Arm kit for Arduino-Rollarm/Arduino Code/Servo and open the file Servo.ino.

💿 Se	ervo   Arduino 1.8	3.1	
File I	Edit Sketch Too	ls Help	
			<b>Q</b>
Ser	vo §		
10	/*		
2	Author	: Allen	=
3	Check	: Amy	

#### Step 4: Select the Board.

💿 Servo   Arduino 1.	.8.1			
File Edit Sketch To	ols Help			
	Auto Format Archive Sketch Fix Encoding & Reload	Ctrl+T		
/*	Serial Monitor	Ctrl+Shift+M		Boards Manager
Check Version	Serial Plotter WiFi101 Firmware Updater	Ctrl+Shitt+L		Arduino AVR Boards Arduino Yún
Date	Board: "Arduino/Genuino L	Jno" I	۲	Arduino/Genuino Uno
Description Company websit	Port: "COM1" Get Board Info	1		Arduino Duemilanove or Diecimila Arduino Nano Arduino/Genuino Mega or Mega 2560

and Port

💿 Se	ervo   Arduin	o 1.8.1		
File I	Edit Sketch	Tools Help		
	• • • • • • • • • • • • • • • • • • •	Auto Format	Ctrl+T	3
		Archive Sketch		
Ser	vos	Fix Encoding &	Reload	
10	/*	Serial Monitor	Ctrl+Shift+N	M
2	Author	Serial Plotter	Ctrl+Shift+L	L
3	Check			
4	Version	WiFi101 Firmwa	are Updater	
5	Date	Board: "Arduing	Nano"	•
6	Descript	Doard, Arddine	0000229"	
7	Company	Processor. ATT	legaszo	Carial parts
_	•	Port: COIVI17		Serial ports
		Get Board Info		COM1
		Programmer: "A	AVRISP mkII"	✓ COM17

Step 5: Click Upload.

💿 Se	ervo   Arduino 1.8.	1	X
File	Edit Sketch Tools	s Help	
Ø			Ø
Ser		d	
10	/*		 🔺
2	Author	: Allen	=
3	Check	: Amy	

After the upload is completed successfully, keep the USB cable connecting. You may hear the sound of gear moving (or may not, if the servo shaft happens to be at 90 degrees at the beginning; but you GENTLY spin the rocker arm and you'll find it's unmovable). So now the servo is adjusted to 90 degrees.

#### 3.5.4 Install Servo Rocker Arm









Note: In this step, please keep the control board power on, Rotate plate 4 to a 90 degree angle with plate 5.



**Note:** In this step, please temporarily turn off the power of the control board, and then rotate the plate 5 to an appropriate angle to fix the servo. Similarly, use a spanner to tighten these M2 self-locking nuts.





# Complete Accessories B Servo Screw D Accessories B

ũ

Ē

Be



**Note:** Power on the control board again in this step. Keep the gripper edge of the plate 7 parallel to the side of the plate 4.







**Note:** Make sure that the inner sides of the plate 6 and plate 7 are parallel and the gears meshed.

#### 3.5.5 Install Button

Please print the **scale.dwg** file **in a 1:1 ratio**. After the printed scale paper is cut, place the paper on plate 2.



Note: It is recommended to use AutoCad software for printing.





**Note:** Align the bulged part of button with the  $0^{\circ}$  position.Rotate the potentiometer clockwise to the end, and put the button onto the potentiometer and press to tighten them.



#### 3.5.6 Install Battery





# 3.6 Control the Rollarm

There are two ways to control the Rollarm: manual control (by handle), or PC control (by Labview). The detailed operations for two ways are as follows.

#### 3.6.1 Manual Control

**Step 1:** Run the **Rollarm.ino** code under the path **DIY Control Robot Arm kit for Arduino-RollarmArduino CodeRollarm**. There are four code files in Rollarm, **Rollarm.ino** is the main program, when the others are subprograms.



When you open the main program, the subprograms will be opened automatically

💿 Ro	Rollarm   Arduino 1.8.1					
File	File Edit Sketch Tools Help					
Ø						
R	ollarm Button	Drive_repeat Re	cord			
1	/*					
2	Author	: Allen				
3	Check	: Amy				
4	Version	: V1.0				
5	Date	: 10/06/2016				
6	Description	: Rollarm control	. program			
7	Company website	: <u>http://www.sunf</u>	ounder.com			
8					*/	

Step 2: Select the corresponding board and port, then click Upload.

Step 3: After the code upload, turn the power switch on, then we can try to control the Rollarm.

Step 4: Rotate the four potentiometer buttons to try the controlled servo and direction:

White potentiometer to control the Servo D, the yellow to control Servo C, the orange to control Servo B, and the red one to control Servo A.



#### **Record behavior**

With the handle, the Rollarm can record its behaviors:

**Rotate one potentiometer** to control one servo to the desired position, and **press the yellow button shortly** to let the control board record this step. Record the rest steps in this way.

When all the steps are done, **press the yellow button for a while (3s)**, it will repeat the recorded steps (Rollarm can record at most 100 steps because of the control board's memory limit.)

![](_page_48_Picture_1.jpeg)

Thus we can make it automatically carry blocks continuously:

#### **Code Explanation**

The program includes three parts: rotating the potentiometers to control the Rollarm, pressing the button slightly for less than one second to record Rollarm's behaviors and pressing the button for a relatively longer time to make Rollarm repeat the recorded steps.

There are four potentiometers to control the arms. The 4 servos from top to bottom are connected to port 4-7 respectively of the expansion board, and the 4 potentiometers control the ports accordingly. In other words, spin the white potentiometer to control the uppermost servo, the yellow to control the next servo below, the orange to control the next servo, and the red one to control the bottom servo.

Since the Rollarm has four servos acting as the moving joint, we need to include a header file for driving the servos and define them.

```
//Create servo object to control a servo.
#include <Servo.h>
Servo Servo_0;
Servo Servo_1;
Servo Servo_2;
Servo Servo_3;
```

After defining the function of driving the servos, we need to read the AD value of the potentiometers and convert it into the rotating angle of the servo since the servos are controlled by rotating the potentiometers.

```
//Read the values ot the potentiometers.
void ReadPot()
{
        SensVal[0] = 0;
        SensVal[1] = 0;
        SensVal[2] = 0;
        SensVal[3] = 0;
        SensVal[0] = analogRead(A0);
        SensVal[1] = analogRead(A1);
        SensVal[2] = analogRead(A2);
        SensVal[3] = analogRead(A3);
}
//The value of the potentiometer is matched to the angle value.
void Mapping0()
{
        SensVal[0] = map(SensVal[0], 0, 1023, 10, 170);
        SensVal[1] = map(SensVal[1], 0, 1023, 10, 170);
        SensVal[2] = map(SensVal[2], 0, 1023, 10, 170);
        SensVal[3] = map(SensVal[3], 0, 1023, 100, 180);
```

After compiling the program, we need to make Rollarm remember the steps, which is done through pressing the button.

```
//Calculate the time the button pressed
void Button()
{
        if (digitalRead(3) == 0)
        {
                delay(10);
                if (digitalRead(3) == 0)
                 {
                         KeyValue = 0;
                         while (!digitalRead(3))
                         {
                                  KeyValue++;
                                  delay(100);
                         }
                 }
        }
}
```

We can tell which part of the code the Rollarm is performing by reading the value upon pressing the button. When the value is larger than 10, it means Rollarm is repeating the steps. When it is between 0 and 10, it means Rollarm is remembering. And when it is 0, it means Rollarm is being controlled by the potentiometers. The specific program is as follows:

(continues on next page)

(continued from previous page)

```
Mapping1();
}
//Long press the button and open the auto mode, start repeating the action.
else if (KeyValue > 10)
{
        if (Flag == 1)
        {
                 Flaq = 0;
                 Calculate();
        }
        Drive_init();
        delay(3000);
        for (int i = 1; i < Time; i++)</pre>
        {
                 Drive_repeat(i);
                 delay(500);
        }
//Did not press the button, open the manual mode.
else
{
        ReadPot();
        Mapping0();
```

Next, we are going to call the function to write the value of the servo rotating angle. However, it is not merely about writing the values directly; the difference between two adjacent rotating values will also be written into the servos. Here we take a servo program for example.

```
//The first axis.
if (Dif0[n] > 0)
{
        for (int j = Joint0[n - 1]; j <= Joint0[n]; j++)</pre>
        {
                 Servo_0.write(j);
                 delay(10);
        }
}
else
{
        for (int j = Joint0[n - 1]; j >= Joint0[n]; j--)
        {
                 Servo_0.write(j);
                 delay(10);
        }
}
```

#### 3.6.2 PC Control

#### Install Labview Software

For this kit, we use the Labview software for control on PC. If you have other better options, welcome to share by post under **Community** -> **FORUM** on our website www.sunfounder.com.

Download the Labview package in the link below:

https://s3.amazonaws.com/sunfounder/Arduino/Labview.zip

After downloading, open it and you will see the folder Rollarm's Installer. Then find the setup file as shown below:

![](_page_51_Figure_7.jpeg)

After the installation is done, in Start Menu, find Rollarm to open the Rollarm software. Or, enter the installation directory we used just now, and double click Rollarm.exe to open it. The defaulted installation directory is: C:Program Files (x86)Rollarm.

![](_page_51_Picture_9.jpeg)

The following interface will show up.

Edit Operate Tools Window H · 중장 ()	Help					
	F	Rolla	arm	Conti	roller	
Mode		Manual Mode		Status		
Manual 💭 Auto	M1	M2	M3	M4	Steering Engine 1	Steering Engine 2
Serial Port	180 - 160 - 140 -	180- 160- 140-	180- 160- 140-	180- 170- 160-		60 00 100 120 10 140 20 0 160 180
Board Type <sup>+</sup> Uno	120- 100- 80-	120- 100- 80-	120- 100- 80-	150- 140- 130-	0 Steering Engine 3	0 Steering Engine 4
Connection Type <sup>+</sup> USB / Serial	60- 40-	60- 40-	60- 40-	120- 110-	60 <sup>80 100</sup> 120 40 140 20 160	120 130 140 150 110 160 100 170
Start 💽	20- - 0-	20- 0-	20-	100- 90-		90

#### Upload the Code

Before using the Rollarm Labview software, flash the control codes into the Rollarm robot, and the steps are as follows. **Step 1:** In order to avoid the incompatibility, please download Arduino IDE 1.0.5 on Arduino official website:

https://www.arduino.cc/en/Main/OldSoftwareReleases#previous

You are suggested to download zip version because zip version does not need installation and you can use it directly.

	HOME STORE S	OFTWARE EDU	RESOURCES	COMMUNITY	HELP
Ardu These pac	kages are no longer supported	by the development	team.		
1.0.5	Windows Windows Installer	MAC OS X	Lin	ux 32 Bit ux 64 Bit	Source code hosted on Gcode
1.0.4	Windows	MAC OS X	Lin	ux 32 Bit ux 64 Bit	Source code hosted on Gcode

![](_page_52_Figure_7.jpeg)

lib	2019/9/12 14:34
libraries	2019/9/12 14:34
reference	2019/9/12 14:34
tools	2019/9/12 14:34
🥺 arduino.exe	2014/1/9 3:46
cygiconv-2.dll	2014/1/9 3:45
cygwin1.dll	2014/1/9 3:45
🚳 libusb0.dll	2014/1/9 3:45
revisions.txt	2014/1/9 3:45
🚳 rxtxSerial.dll	2014/1/9 3:45
🕲 uninstall.exe	2019/8/15 15:13

Step 3: Click File- >Open, and you can find the LIFA\_Base.ino on the path

 $DIY\_Control\_Robot\_Arm\_kit\_for\_Arduino-Rollarm.1 Arduino\ CodeLIFA\_Base$ 

And click to open.

💿 sketch_sep12a   Arduind	o 1.0.5-r2	_	×
File Edit Sketch Tools He	lp		
New	Ctrl+N		ø
Open	Ctrl+O		_
Sketchbook	>		
Examples	>		^
Close	Ctrl+W		
Save	Ctrl+S		
Save As	Ctrl+Shift+S		

**Step 4:** Choose the proper Board and Port, and upload the codes to the control board.

💿 LIF	A_Base   A	rduino 1.0.5-ri	2		-		$\times$
File Ed	it Sketch	Tools Help					
00							P
LIFA	_Base	AFMotor.cpp	AFMotor.h	AccelStepper	cpp	AccelSt	epj 🔻 .h
							^
/xoxoxoxox xox	00000000000000	000000000000000000000000000000000000000			ojojojojojo		
** Lj **	/FA_Firmwaz	re — Provides	Basic Arduino	Sketch For In	terfac	ing With	LabVI
** ¥1 ** ¥1 ** L:	ritten By: ritten On: ast Updates	Sam Kristo November 2 1: Dec 2011 -	ff - National 010 Kevin Fort -	. Instruments • National Inst	rument	2	

DO NOT unplug the USB cable at the moment.

#### Using the Software

Back to the Rollarm Labview software, which includes two parts: Manual Mode and Automatic Mode.

#### **Manual Mode**

Step1: See the interface of manual control below. After the Labview is installed and run, this mode is enabled by default.

![](_page_55_Figure_1.jpeg)

**Step2:** Click the inverted triangle icon for Serial Port, select the port according to you COM port. Here is COM24, which varies for different computers.

**Note:** If you can only see COM1, to solve the problem, just replug the USB cable. Then start from sketch upload again.

![](_page_55_Figure_4.jpeg)

Step 3: Select the Board Type (Uno) and Connection Type(USB/Serial).

Roard Type	120	120
Uno	100- :	100-
	80-	80-
Connection Type	60-	60-
± USB / Serial	40-	40-
	20-	20-

Step 4: There are three small icons at the top left. Click the middle on to run the software.

![](_page_56_Figure_3.jpeg)

Step5: Click Start, and the button will change from dark to light green.

![](_page_57_Picture_1.jpeg)

**Note:** Sometimes you can see the mistakes like 5005 or 5002 that are as results of the software recognition failure of Arduino control board. Now, please click OK. Then there is a quick quiver state in Rollarm robot to return to the setting position. After that, you can continue to do your next step.

× X
Error 5005 occurred at Unable to find Arduino. Please make sure the Arduino is connected to your system and that the Arduino drivers are installed.
This error code is undefined. Undefined errors might occur for a number of reasons. For example, no one has provided a description for the code, or you might have wired a number that is not an error code to the error code input.
Additionally, undefined error codes might occur because the error relates to a third-party object, such as the operating system or ActiveX. For these third-party errors, you might be able to obtain a description of the error by searching the Web for the error code (5005) or for its hexadecimal representation (0x0000138D).
OK Why not found?

Step 6: M1-M4 correspond to Servo1-Servo4, you can move the slider control the 4 servo on the Rollarm.

![](_page_58_Figure_1.jpeg)

#### Automatic Mode

You can also switch to **Auto Mode**. Fill the value of the rotating angle of the servos into the table under **Auto Mode** one by one. After filling the figures, click the **Start** button, then Rollarm will then perform as you just set.

M1-M4: Servo1-Servo4.

**1-9:** 9 groups of rotating angle.

**Interval times(ms):** The interval times between two groups, such as interval times between M4 in row 1 and M1 in row 2.

Interval times(ms) 2: The interval time between two rotating angles within a group.

Note: the range of the data for Mode 4 is 90~180. Otherwise, it will be damaged due to stalling.

![](_page_59_Figure_8.jpeg)

# 3.7 FAQ

#### 3.7.1 About the Assembly

**Q1:** After assembly and program download, the Rollarm's four axes are in wired position, some maybe out of control. What should I do?

A: Remember to power on and calibrate each servo before assembly.

#### 3.7.2 About the Arduino code control

**Q1:** When I open a program, it prompts me that a new folder should be created. After I click Yes and a new folder is created, the main program reports an error when I want to open the main program. What's going wrong?

A: DO NOT open these subprograms under Arduino codeRollarm separately:

Button
Drive_repeat
Record
Rollarm

If you open the subprograms separately, a dialog box will pop up like this:

The file "Button.ino" needs to be inside a sketch folder named "Button". Create this folder, move the file, and continue?           OK         Cancel

If a new folder has been created for the subprogram, please cut the subprogram file to the original directory Arduino codeRollarm. Reopen the main program:

![](_page_61_Picture_1.jpeg)

If a new folder has been created for the subprogram, please cut the subprogram file to the original directory Arduino codeRollarm. Reopen the main program:

![](_page_61_Picture_3.jpeg)

#### 3.7.3 About the Labview software control

**Q1:** After powering on the Rollarm, why do the servos shake a little when there's no movement at all? **A:** There may be something wrong with the Serial Port. For instance, the following condition may appear:

![](_page_62_Figure_3.jpeg)

Turn off the Rollarm, power it on again, and reconnect the serial port to try.

Q1: The Rollarm is in a strange position when I click Start and it's in the automatic mode. Anything wrong?

A: Here no values is filled in the table yet. The first three axes are in  $0^{\circ}$ , and the last one is in  $90^{\circ}$ . You need to fill the correct value of the rotating angle first, and click **Start** to run.

![](_page_63_Figure_1.jpeg)

Before clicking **Start**, you need to fill in the rotating angle for each axis in different steps, and the interval time between steps. If you don't know the exact angle, you can shift to the manual mode and note down the angle values for each step, and then shift back to fill in. When all the steps above are done, you can click **Start** to let Rollarm perform the automatic control.

## FOUR

# **COPYRIGHT NOTICE**

All contents including but not limited to texts, images, and code in this manual are owned by the SunFounder Company. You should only use it for personal study, investigation, enjoyment, or other non-commercial or nonprofit purposes, under therelated regulations and copyrights laws, without infringing the legal rights of the author and relevant right holders. For any individual or organization that uses these for commercial profit without permission, the Company reserves the right to take legal action.